


TECHNICAL OPERATIONS DOCUMENTATION

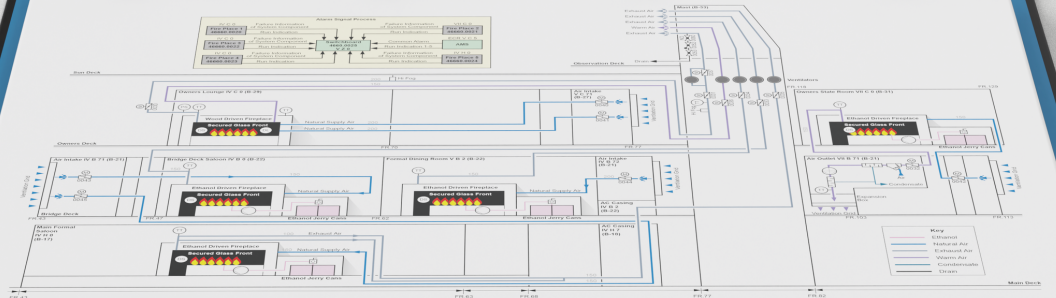

SYSTEM DIAGRAMS
FIRE PLACE





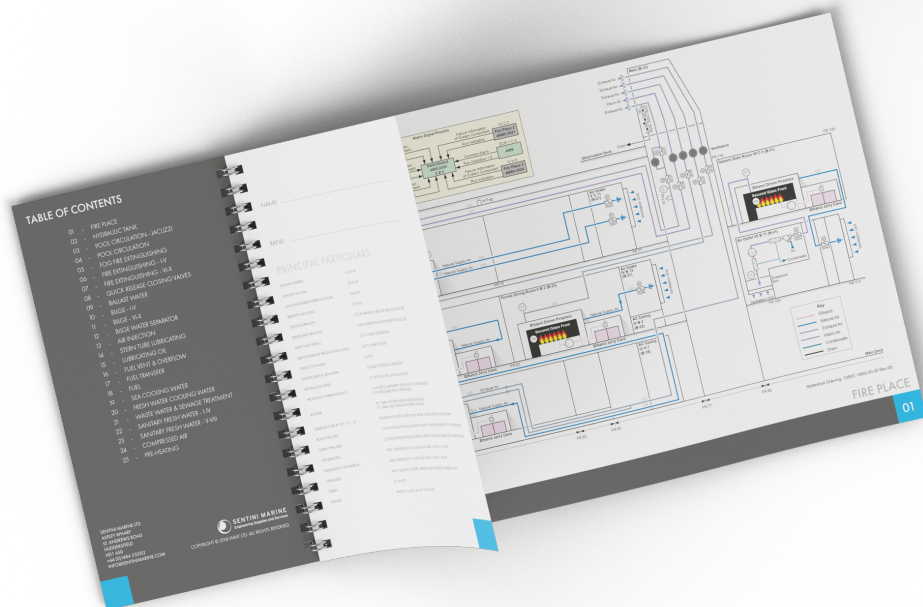


Illustration 7.12a Rescue Boat Davit

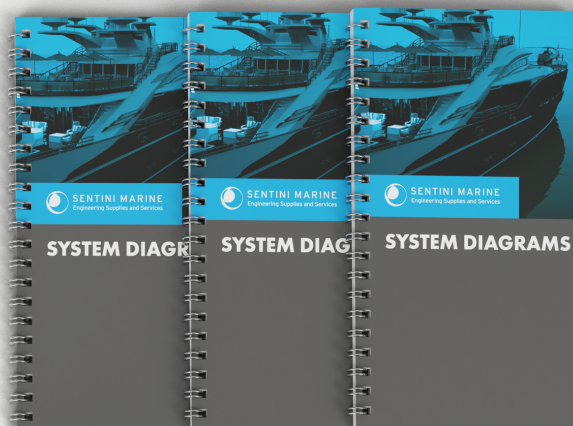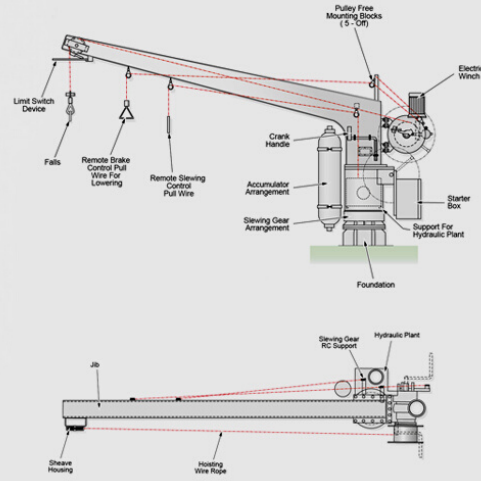

To Reset the Boat Hooks

a) Check that the hook (6) is in the position shown, with the arrow (A) at the notch.

b) Push the release lever (2) back into the locked position.

Caution!

Never operate the release lever (2) using excessive force.

c) Check the position of the bolt (9),
The marks must line up in the green 'locked' area.

d) Secure the hand lever with the safety bolt (1).

e) Check the shackle pin (5) is in the correct position.

Warning!

If hook position (9) or bolt (A) are not in the correct position or If the hook or release lever do not move easily, Do not use the hooks for hoisting.

Making Ready For Hoisting

a) Push the long link (7) into the hook (6) when the pawl (8) is in the open position.

