



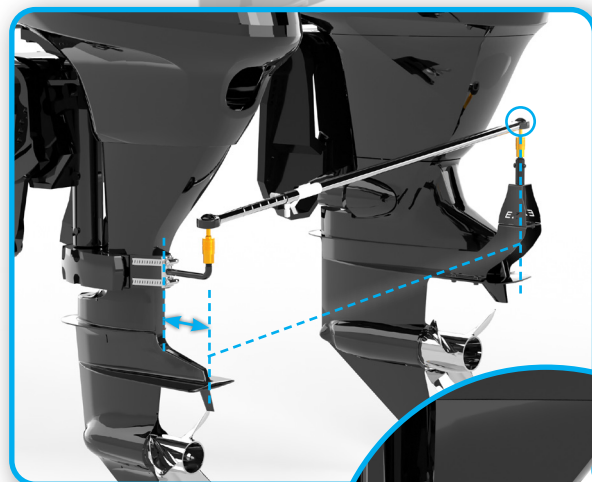

UNIVERSAL AUXILIARY OUTBOARD STEERING SYSTEM

Find Your Fit!

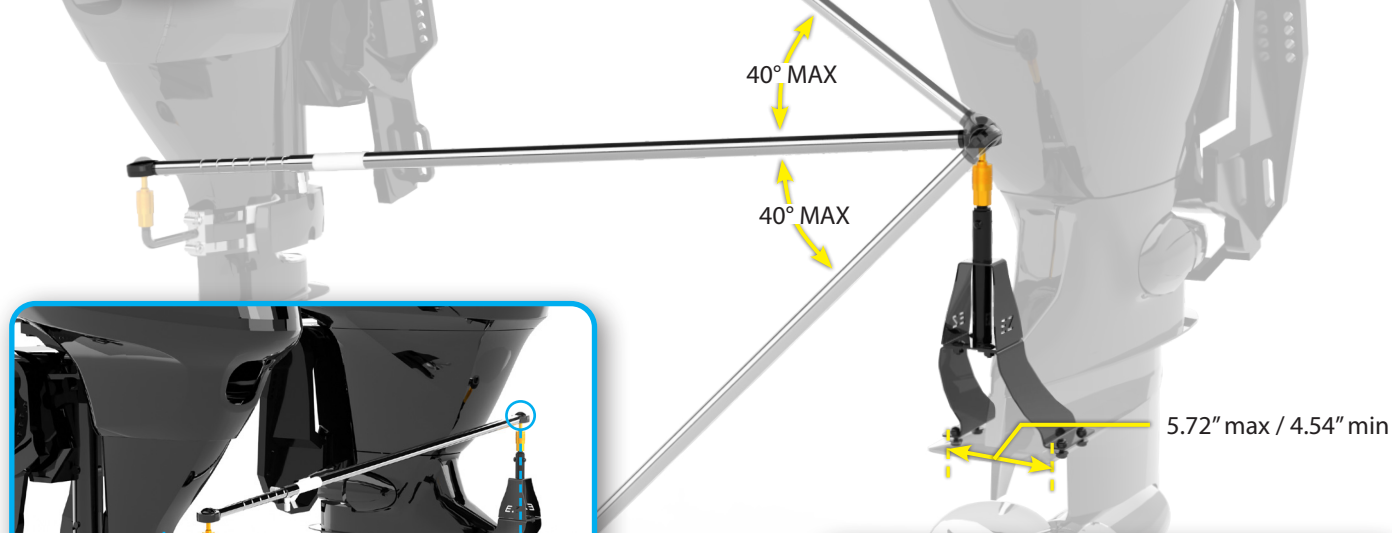


Auxiliary Bracket Offset

With both engines in the down position, measure the front to back distance in inches from the installed quick release on the main engine (circled in cyan) to the vertical edge of the kicker motor when the offset bracket will mount.

Then select the closest offset bracket from the table:

3", 4", or 7".

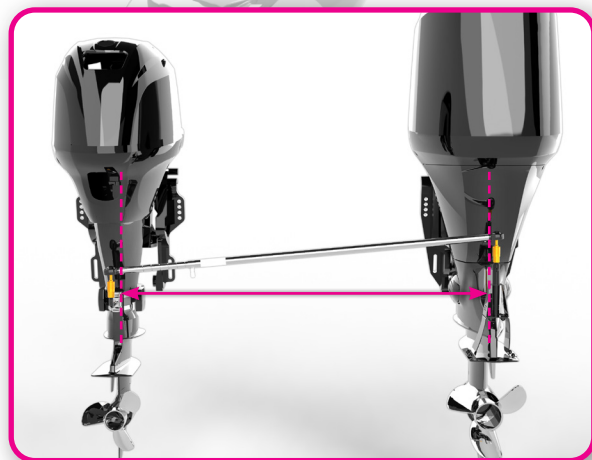

Center to Center

With both engines down, measure the center to center distance in inches from engine to engine.

Then select the length that aligns with their measurement:

19-22", 23-26", 29-33", 27-28", 39-46", or 34-38"

Auxiliary Bracket Offset

3"

EZUKIT310001 EZUKIT310002 EZUKIT310003 EZUKIT310004 EZUKIT310005 EZUKIT310006

4"

EZUKIT410001 EZUKIT410002 EZUKIT410003 EZUKIT410004 EZUKIT410005 EZUKIT410006

7"

EZUKIT710001 EZUKIT710002 EZUKIT710003 EZUKIT710004 EZUKIT710005 EZUKIT710006

Center to Center

19-22"

23-26"

29-33"

27-28"

39-46"

34-38"